

# TRAILFRONT CAGE

## MOUNTING INSTRUCTIONS


Protect your frame or rack with a film (not included) before attaching your bag – it helps prevent wear from dust and movement.

Max. load:  
**5 kg**




All product details, instructions & videos in one place.

- 1 Use the spacers to individually adjust the distance to the handlebars. Add one or two spacers each side if needed. Make sure that no cables are crushed and close the velcros loops tightly.

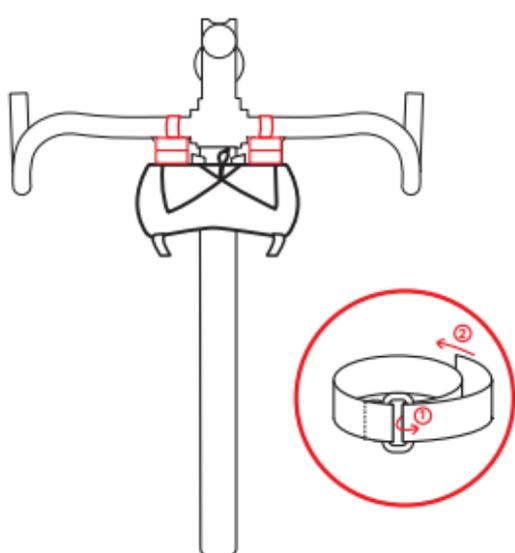


- 2 Close the webbings in the tension lock and pull tight before closing the camlock.

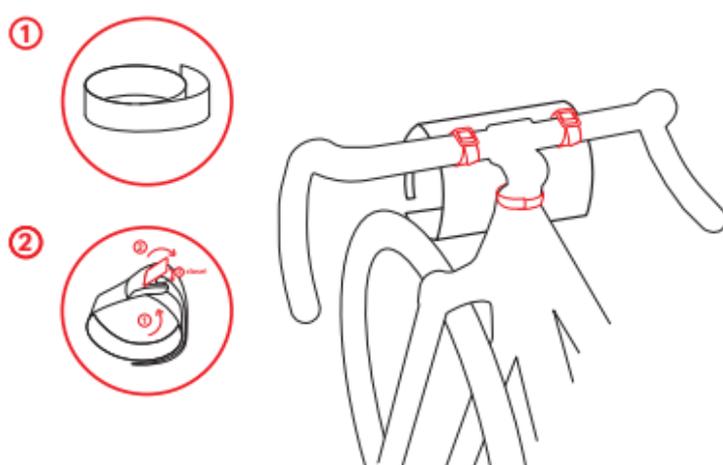


Make sure it's firmly tightened and securely closed!

- 3 If necessary, use the spacers to adjust the distance and close the velcro around the head tube.

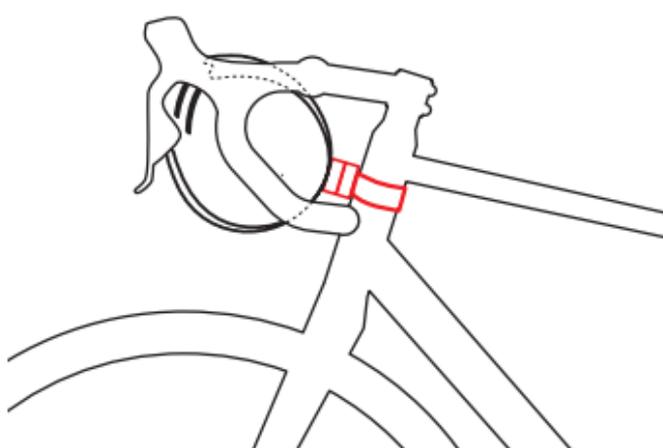


Make sure it's firmly tightened and securely closed!

- 4** Add the dry bag and fix it by closing the two buckles. Pull the webbings tight and close the camlock buckles.

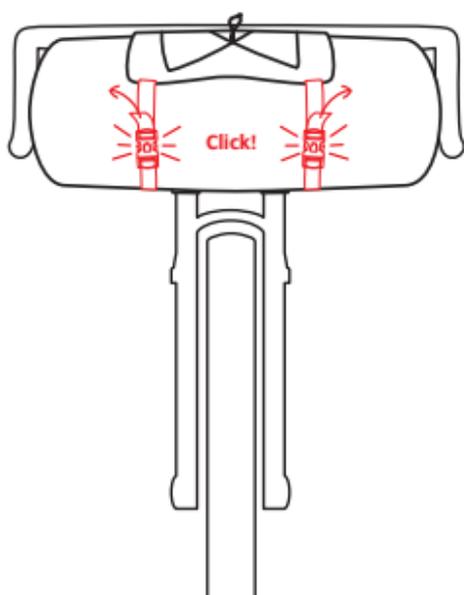

- 5** Elastic cord on top to attach additional gear. Make sure that nothing hangs loose that could get stuck in spokes and tighten with cord stopper.

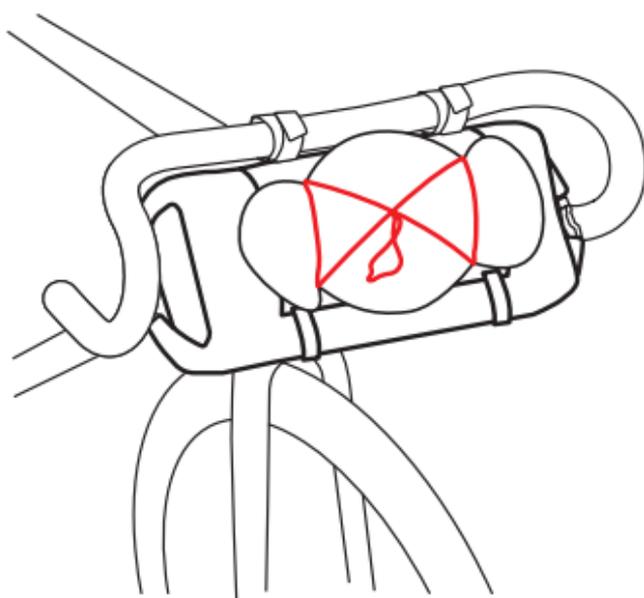

- 6** Shoulderbelt to carry drybag over shoulder.



Before you start your journey, make sure all loose belts and your luggage are securely stowed to avoid accidents!