

TRAILFORK

MOUNTING INSTRUCTIONS


Protect your frame or rack with a film (not included) before attaching your bag – it helps prevent wear from dust and movement.

Max. load:
3 kg




All product details, instructions & videos in one place.

- 1 Check the circumference of your bike fork before mounting the adapter.

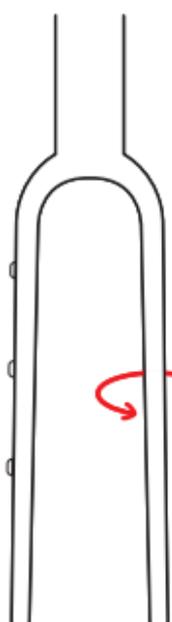


frame
circumference
15–60 mm

- 2 At least two threaded bushes are required for mounting the adapter.

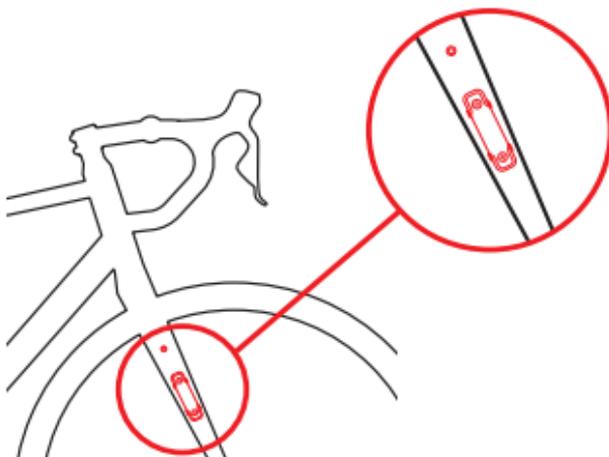


- 3 Attach the adapter to the bike with two screws (included). Pay attention to the torque specified by the bike manufacturer of your bike.

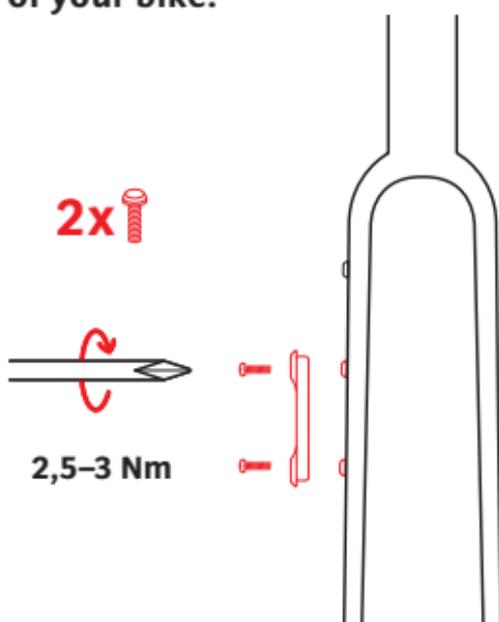


VAUDE


- 4** Attach the bike bag to the previously attached adapter.

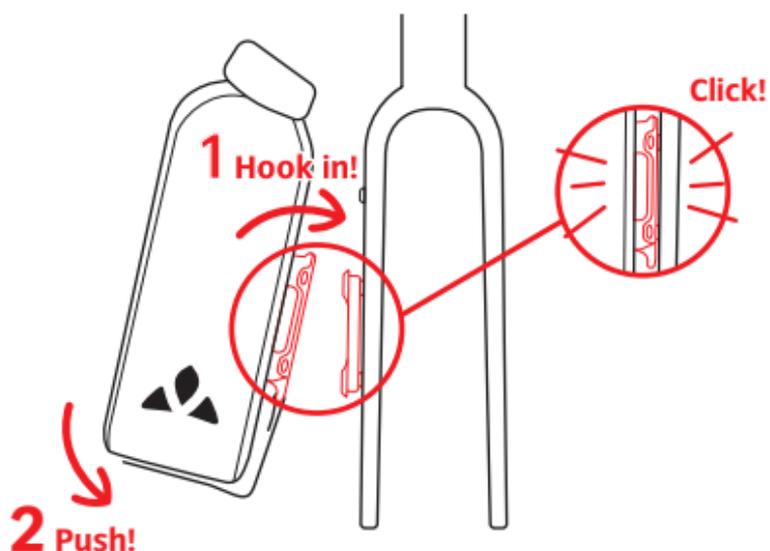

- 5** Make sure there are no loose hanging ends/objects that could get caught in the spokes.

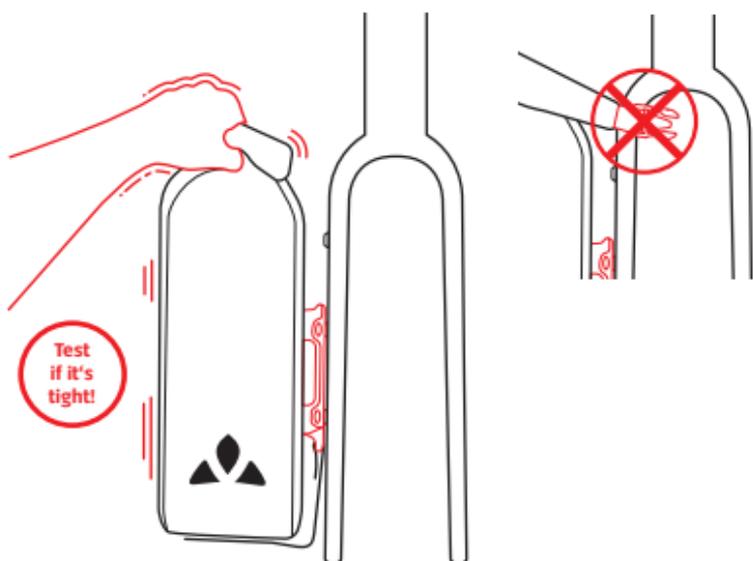

- 6** To remove the bag, pull on the designated handle.

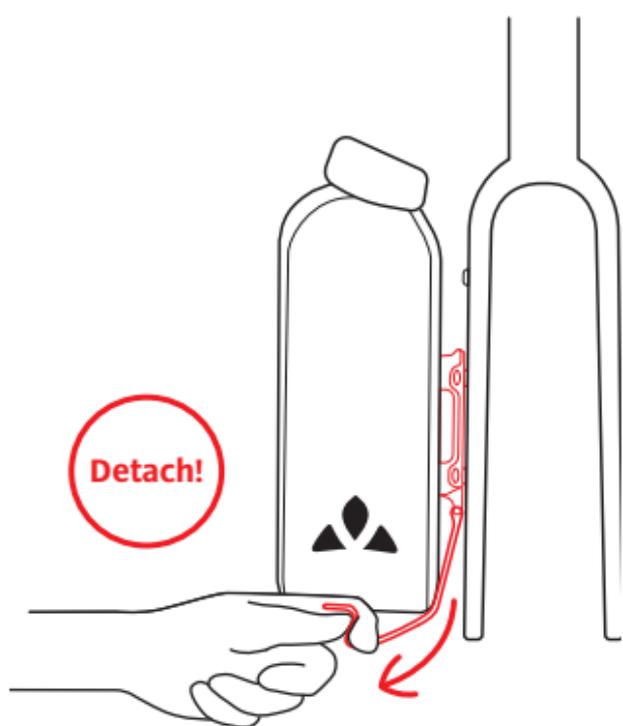

Before you start your journey, make sure all loose belts and your luggage are securely stowed to avoid accidents!